 
 
 
 

 
 
 
 
 
 







 
 
 
 
 
 
 
 
 



Printer Manufacture	Printer Model	Type of Printer	Printer Server Model			
			PS-150U	PS-160A	WPS-120U	WPS-130U
			PS-130U			
			1U	1P	1U	1U
HP	Business InkJet 1000		OK		OK	OK
	Color Laserjet 1600	GDI(USB)	OK		OK	OK
	Color Laserjet 2500	Parallel/USB (PCL6/5C)	OK	OK	OK	OK
	Color LaserJet 2550	PCL6/PS level 3 (USB)	OK	OK	OK	OK
	Color LaserJet 2550L/LN	PCL6/PS level 3 (USB)	OK		OK	OK
	Color LaserJet 2600		OK		OK	OK
	Color LaserJet 2605	PCL6/5E(USB)	OK	OK	OK	OK
	Color LaserJet 2700n	USB2.0	OK		OK	OK
	Color LaserJet 2840		OK		OK	OK
	Color LaserJet 3700	PCL6/5C(USB,Parallel)	OK	OK	OK	OK
	Color LaserJet 4000			OK		
	Color LaserJet 4100			OK		
	Color LaserJet 4500			OK		
	Color Laserjet 4650	Install PCL Driver	OK	OK	OK	OK
	Color LaserJet 8550 Color Laser	Parallel (PCL5C)		OK		
	Color Laserjet CM1312 MFP	USB	OK		OK	OK
	Designjet 100		OK	OK	OK	OK
	Designjet 600			OK		
	Designjet 650C			OK		
	Designjet 700			OK		
	Designjet 750C+			OK		
	DeskJet 1120C	Parallel (PCL3)		OK		
	Deskjet 1125C	Parallel/USB (PCL3)	OK	OK	OK	OK

HP	Deskjet 1180C	Parallel/USB	OK	OK	OK	OK
	DeskJet 1280	PCL3(USB/Parallel)	OK	OK	OK	OK
	Deskjet 3325	USB	OK		OK	OK
	DeskJet 3420	USB	OK		OK	OK
	Deskjet 3535		OK		OK	OK
	Deskjet 3650		OK		OK	OK
	Deskjet 3743		OK		OK	OK
	Deskjet 3748	USB	OK		OK	OK
	Deskjet 3820	USB2.0/Parallel	OK	OK	OK	OK
	DeskJet 3920		OK		OK	OK
	DeskJet 3940		OK		OK	OK
	DeskJet 400/420	Parallel		OK		
	Deskjet 450C		OK	OK	OK	OK
	DeskJet 5440		OK		OK	OK
	DeskJet 5500			OK		
HP	Deskjet 5550	USB/Parallel	OK	OK	OK	OK
	Deskjet 5652	USB/Parallel	OK	OK	OK	OK
	Deskjet 670C	Parallel(PCL3)		OK		
	Deskjet 680C			OK		
	Deskjet 720C	Parallel		OK		
	Deskjet 810C	USB2.0/Parallel(PCL3)	OK	OK	OK	OK
	Deskjet 830C		OK	OK	OK	OK
	Deskjet 845C	USB(PCL3)	OK		OK	OK
	DeskJet 9300	USB/Parallel(PCL3)	OK	OK	OK	OK
	Deskjet 948c	Parallel/USB	OK	OK	OK	OK
	Deskjet 9600		OK	OK	OK	OK
	Deskjet 9650	USB/Parallel(PCL3)	OK	OK	OK	OK
	Deskjet 970c XI	Parallel/USB(PCL3)	OK	OK	OK	OK
	Deskjet 9800	USB/Parallel	OK	OK	OK	OK

Deskjet D1560		OK		OK	OK
Deskjet D2560		OK		OK	OK
Deskjet D5560	USB	OK		OK	OK
DeskJet F370		OK		OK	OK
DeskJet F380		OK		OK	OK
DeskJet F4185		OK		OK	OK
DeskJet F4280		OK		OK	OK
Deskjet F4480	USB	OK		OK	OK
Laserjet M1005 MFP		OK		OK	OK
LaserJet 1022	USB(GDI)	OK		OK	OK
LaserJet 1022N		OK		OK	OK
Laserjet 1100	Parallel		OK		
LaserJet 1160	USB(PCL5e/GDI)	OK	OK	OK	OK
LaserJet 1200	USB/Parallel (PCL6/5e)	OK	OK	OK	OK
LaserJet 1220		OK	OK	OK	OK
Laserjet 1300	USB/Parallel(PCL6/5e)	OK	OK	OK	OK
Laserjet 1320	USB/Parallel(PCL6/5e)	OK	OK	OK	OK
LaserJet 2100	Parallel (PCL6)		OK		
Laserjet 2200d	USB/Parallel	OK	OK	OK	OK
Laserjet 2300	USB/Parallel(PCL6/5E)	OK	OK	OK	OK
LaserJet 2410	PCL6/5E(USB)	OK	OK	OK	OK
LaserJet 2420	USB/Parallel(PCL6/5E)	OK	OK	OK	OK
LaserJet 2550		OK	OK	OK	OK
LaserJet 3015	USB/Parallel(PCL6/5E)	OK	OK	OK	OK
LaserJet 3050	USB(PCL6/PCL5E)	OK		OK	OK
LaserJet 3055		OK		OK	OK
Laserjet 3200	USB/Parallel(PCL6/5E)	OK	OK	OK	OK
Laserjet 3330		OK	OK	OK	OK
LaserJet 3330mfp	USB/Parallel (PCL6/5E)	OK	OK	OK	OK

 
 
 
 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 




HP	LaserJet 3380	USB/Parallel (PCL6/5E)	OK		OK	OK
	Laserjet 4000	Parallel(B.C)		OK		
	LaserJet 4050	Parallel(PCL6/5e)		OK		
	Laserjet 4100 /4100n	Parallel (PCL6/5E)		OK		
	LaserJet 4250	USB/Parallel(PCL6/5E)	OK	OK	OK	OK
	Laserjet 4300n	Parallel (PCL6/5E)		OK		
	Laserjet 4300tn/dtn	Parallel (PCL6/5E)		OK		
	Laserjet 4500			OK		
	Laserjet 4650		OK	OK	OK	OK
	Laserjet 5100fn/tn	Parallel (PCL6/5E)		OK		
	Laserjet 5100le/se	Parallel (PCL6/5E)		OK		
	Laserjet 6P / 6L	Parallel		OK		
	Laserjet 8100			OK		
	Laserjet M1005		OK		OK	OK
	Laserjet M1005 MFP		OK		OK	OK
	Laserjet M1120 MFP		OK		OK	OK
	LaserJet M1319F MFP	USB	OK		OK	OK
	LaserJet P2015	USB(PCL6/5e/PS Level 3	OK		OK	OK
	Officejet J3608		OK		OK	OK
	OfficeJet 4255		OK		OK	OK
	OfficeJet 4255		OK		OK	OK
	OfficeJet 5610	USB	OK		OK	OK
	Officejet J5780		OK		OK	OK
	OfficeJet 6210		OK		OK	OK
	OfficeJet 6310	USB	OK		OK	OK
Officejet 6000	USB	OK		OK	OK	
Officejet 7000	USB			OK	OK	
OfficeJet 7210		OK		OK	OK	

OfficeJet J4580		OK		OK	OK
Officejet J6480		OK		OK	OK
Officejet K7100		OK		OK	OK
OfficeJet K850		OK	OK	OK	OK
OfficeJet Pro K5300		OK		OK	OK
OfficeJet Pro K550		OK		OK	OK
Officejet Pro L7380		OK		OK	OK
Officejet Pro L7590		OK		OK	OK
Officejet Pro 8000	USB	OK		OK	OK
Photosmart 2610		OK		OK	OK
Photosmart 3110		OK		OK	OK
Photosmart 7150	USB2.0	OK		OK	OK
Photosmart 7200		OK		OK	OK
Photosmart 7550	USB 2.0 、 Parallel	OK		OK	OK
Photosmart 7660	USB(PCL3)	OK		OK	OK
Photosmart 7830		OK		OK	OK
Photosmart 7900		OK		OK	OK
Photosmart 8200		OK		OK	OK
Photosmart Plus B209a	USB	OK		OK	OK
Photosmart A520		OK		OK	OK
Photosmart C309a		OK		OK	OK
Photosmart C3180		OK		OK	OK
Photosmart C4180		OK		OK	OK
Photosmart C4280		OK		OK	OK
Photosmart C4385		OK		OK	OK
Photosmart C4480		OK		OK	OK
Photosmart C4580		OK		OK	OK
Photosmart C5180		OK		OK	OK
Photosmart C5280		OK		OK	OK

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 



	Photosmart C5380		OK		OK	OK
	Photosmart C6180		OK		OK	OK
	Photosmart C6280		OK		OK	OK
	Photosmart C6380		OK		OK	OK
	Photosmart C7180		OK		OK	OK
	Photosmart C7280		OK		OK	OK
	Photosmart D5160		OK		OK	OK
	Photosmart D5360		OK		OK	OK
	Photosmart D5460		OK		OK	OK
	Photosmart D7160		OK		OK	OK
	Photosmart D7260		OK		OK	OK
	Photosmart D7360		OK		OK	OK
	PSC 1210	USB 2.0			OK	OK
	PSC 1315		OK		OK	OK
	PSC 1350	USB (LIDIL)	OK		OK	OK
	PSC 1410		OK		OK	OK
	PSC 1610		OK		OK	OK
	PSC 2210		OK		OK	OK
	PSC 2310	USB	OK		OK	OK
Printer Manufacture	Printer Model	Type of Printer	PS-150U	PS-160A	WPS-120U	WPS-130U
			PS-130U			
	Aculaser C1100SE		OK	OK	OK	OK
	AcuLaser C1900	USB/Parallel(ESC/P2)	OK	OK	OK	OK
	AcuLaser C3800		OK		OK	OK
	AcuLaser C9100		OK		OK	OK
	Aculaser M2010DN		OK		OK	OK
	Aculaser M2010D		OK	OK	OK	OK
	B-508DN		OK		OK	OK

C750		OK	OK	OK	OK
CC-500L		OK		OK	OK
CL-760		OK		OK	OK
E-300L		OK		OK	OK
E-520		OK		OK	OK
E-720		OK		OK	OK
EC-01		OK		OK	OK
EPL 5700			OK		
EPL 5700	Parallel (ESC/Pages)		OK		
EPL 5800		OK	OK	OK	OK
EPL 5800	USB/Parallel (PCL6/5e)	OK	OK	OK	OK
EPL 5900		OK	OK	OK	OK
EPL 5900	USB/Parallel	OK	OK	OK	OK
EPL 6100	USB/Parallel (PCL6/5e)	OK	OK	OK	OK
EPL 6200		OK	OK	OK	OK
EPL 6200	USB/Parallel (ESC/Pages)	OK	OK	OK	OK
EPL N2120			OK		
LP2500		OK		OK	OK
LP-7700		OK		OK	OK
LP-8700		OK		OK	OK
LP-8800C		OK		OK	OK
LP8900		OK		OK	OK
LP-9500C		OK		OK	OK
LQ 100			OK		
LQ 1000C			OK		
LQ 1170+			OK		
LQ 1170C			OK		
LQ 1170C+			OK		
LQ 2070C			OK		

LQ 2080C			OK		
LQ 2090			OK		
LQ 2090C		OK	OK	OK	OK
LQ 2170C	Parallel(ESC/P)		OK		
LQ 2180C			OK		
LQ 2550			OK		
LQ 300	Parallel(ESC/P)		OK		
LQ 300+			OK		
LQ 300+II		OK	OK	OK	OK
LQ 3500C			OK		
LQ 570C			OK		
LQ 670			OK		
LQ 680	Parallel(ESC/P)		OK		
LQ 680C			OK		
MC-2000		OK		OK	OK
PictureMate PM250		OK		OK	OK
PM-860PT		OK		OK	OK
PM-890C		OK		OK	OK
PM-920C		OK		OK	OK
PM-930C		OK		OK	OK
PM-950C		OK		OK	OK
PM-970C		OK		OK	OK
PM-980C		OK		OK	OK
PM-A550		OK		OK	OK
PM-A620		OK		OK	OK
PM-A650		OK		OK	OK
PM-A720		OK		OK	OK
PM-A820		OK		OK	OK
PM-A840		OK		OK	OK
PM-A850		OK		OK	OK

 
 
 



 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 




PM-A890		OK		OK	OK
PM-A900		OK		OK	OK
PM-A920		OK		OK	OK
PM-A940		OK		OK	OK
PM-A950		OK		OK	OK
PM-A970		OK		OK	OK
PM-2200C		OK		OK	OK
PM-3500C		OK		OK	OK
PM-3700C		OK		OK	OK
PM-4000PX		OK		OK	OK
PM-D800		OK		OK	OK
PM-D870		OK		OK	OK
PM-D1000		OK		OK	OK
PM-FA700		OK		OK	OK
PM-G800		OK		OK	OK
PM-G820		OK		OK	OK
PM-G850		OK		OK	OK
PM-G860		OK		OK	OK
PM-G4500		OK		OK	OK
PM-T960		OK		OK	OK
PM-T990		OK		OK	OK
PX-5000		OK		OK	OK
PX-A640		OK		OK	OK
PX-A740		OK		OK	OK
PX-G5300		OK		OK	OK
PX-G5100		OK		OK	OK
PX-G930		OK		OK	OK
PX-G5000		OK		OK	OK
PX-V780		OK		OK	OK
RX 510		OK		OK	OK

RX 530		OK		OK	OK
RX 590		OK		OK	OK
RX 630		OK		OK	OK
RX 690		OK		OK	OK
Stylus C20		OK		OK	OK
Stylus C40		OK		OK	OK
Stylus C41UX/SX	USB	OK		OK	OK
Stylus C43UX		OK		OK	OK
Stylus C45		OK		OK	OK
Stylus C59		OK		OK	OK
Stylus C60	USB/Parallel	OK	OK	OK	OK
Stylus C63		OK	OK	OK	OK
Stylus C67		OK	OK	OK	OK
Stylus C79		OK		OK	OK
Stylus C83			OK		
Stylus C90		OK		OK	OK
Stylus Color 1160	USB/Parallel	OK		OK	OK
Stylus Color 1500		OK		OK	OK
Stylus Color 1520		OK		OK	OK
Stylus Color 400	Parallel		OK		
Stylus Color 600			OK		
Stylus Color 670	USB/Parallel (ESC/P)	OK	OK	OK	OK
Stylus Color 800	Parallel (ESC/P2)	OK	OK	OK	OK
Stylus Color 810		OK	OK	OK	OK
Stylus Color 850	Parallel (ESC/P2)	OK	OK	OK	OK
Stylus Color 900	USB/Parallel (ESC/P2)	OK		OK	OK
Stylus CX-1500		OK		OK	OK
Stylus CX-2900		OK		OK	OK
Stylus CX-3500		OK		OK	OK
Stylus CX-3700		OK		OK	OK

EPSON	Stylus CX-3900		OK		OK	OK
	Stylus CX-4100		OK		OK	OK
	Stylus CX-4700		OK		OK	OK
	Stylus CX-4900		OK		OK	OK
	Stylus CX-5300		OK		OK	OK
	Stylus CX-5500		OK		OK	OK
	Stylus CX-5505		OK		OK	OK
	Stylus CX-5900		OK		OK	OK
	Stylus CX-6900F		OK		OK	OK
	Stylus CX-7300		OK		OK	OK
	Stylus CX-7800		OK		OK	OK
	Stylus CX-8300		OK		OK	OK
	Stylus CX-9300F		OK		OK	OK
	Stylus Office T30		OK		OK	OK
	Stylus Office T40W	USB	OK		OK	OK
	Stylus Office TX300F		OK		OK	OK
	Stylus Office TX510FN	USB	OK		OK	OK
	Stylus Office TX600FW		OK		OK	OK
	Stylus Office TX610FW	USB	OK		OK	OK
	Stylus Office T1100	USB	OK		OK	OK
	Stylus Photo 915		OK		OK	OK
	Stylus Photo 1270	USB/Parallel	OK	OK	OK	OK
	Stylus Photo 1290	USB/Parallel	OK		OK	OK
	Stylus Photo 1390		OK		OK	OK
	Stylus Photo 2100		OK		OK	OK
	Stylus Photo 710	USB/Parallel	OK		OK	OK
Stylus Photo 720	USB/Parallel	OK		OK	OK	
Stylus Photo 790		OK		OK	OK	
Stylus Photo 810		OK	OK	OK	OK	
Stylus Photo 830U		OK		OK	OK	

Stylus Photo 900		OK	OK	OK	OK
Stylus Photo 915		OK		OK	OK
Stylus Photo EX2	Parallel	OK	OK	OK	OK
Stylus Photo EX3	Parallel/USB1.1	OK	OK	OK	OK
Stylus Photo R1800		OK	OK	OK	OK
Stylus Photo R210	USB1.1	OK		OK	OK
Stylus Photo R230	USB	OK		OK	OK
Stylus Photo R250	USB	OK		OK	OK
Stylus Photo R270	ESC/P(USB)	OK		OK	OK
Stylus Photo R310	USB2.0	OK		OK	OK
Stylus Photo R350		OK		OK	OK
Stylus Photo R2400	USB	OK		OK	OK
Stylus Photo R800		OK		OK	OK
Stylus Photo RX430	USB	OK		OK	OK
Stylus Photo RX 510		OK		OK	OK
Stylus Photo RX 530		OK		OK	OK
Stylus Photo RX 590		OK		OK	OK
Stylus Photo RX 630		OK		OK	OK
Stylus Photo RX 650		OK		OK	OK
Stylus Photo RX 690		OK		OK	OK
Stylus Photo R2880		OK		OK	OK
Stylus Photo TX700W	USB	OK		OK	OK
Stylus Photo TX800FW	USB	OK		OK	OK
Stylus Pro 7600	USB/Parallel	OK	OK	OK	OK
Stylus TX550W	USB	OK		OK	OK
Stylus TX410	USB	OK		OK	OK
Stylus TX200	USB	OK		OK	OK
Stylus TX210	USB	OK		OK	OK
Stylus TX100	USB	OK		OK	OK
Stylus TX110	USB	OK		OK	OK

	Stylus T20	USB	OK		OK	OK
	Stylus T21	USB	OK		OK	OK
	Stylus Photo T50	USB	OK		OK	OK
	TM883 (III)			OK		
	TM T88III			OK		
Printer Manufacture	Printer Model	Type of Printer	PS-150U	PS-160A	WPS-120U	WPS-130U
			PS-130U			
Canon	BJ-330			OK		
	BJC-4200			OK		
	BJC-4300	Parallel		OK		
	BJC-4500	Parallel				
	BJC-4550	Parallel		OK		
	BJC-4600			OK		
	BJF9000			OK	OK	OK
	D380			OK	OK	OK
	I-255			OK	OK	OK
	I-355			OK	OK	OK
	I-450			OK	OK	OK
	I-455			OK	OK	OK
	I-470D			OK	OK	OK
	I-475D			OK	OK	OK
	I-550			OK	OK	OK
	I-560			OK	OK	OK
	I-850	IEEE 1284/USB		OK	OK	OK
	I-865			OK	OK	OK
	I-950	USB 2.0		OK	OK	OK
	I-6100			OK	OK	OK
I-6500			OK	OK	OK	
I-9100			OK		OK	

I-9950		OK		OK	OK
IX4000		OK		OK	OK
IX5000		OK		OK	OK
Imageclass D380		OK		OK	OK
MP-160		OK		OK	OK
MP-638		OK		OK	OK
MP 770		OK		OK	OK
MX318		OK		OK	OK
MX320		OK		OK	OK
MX700		OK		OK	OK
PIXUS IP2500		OK		OK	OK
PIXUS 990i		OK		OK	OK
PIXMA iP1000	USB1.1	OK		OK	OK
PIXMA iP1700		OK		OK	OK
PIXMA iP1800		OK		OK	OK
PIXMA Ip1880	USB	OK		OK	OK
PIXMA Ip2000		OK		OK	OK
PIXMA iP3000	USB 2.0	OK		OK	OK
PIXMA Ip3300		OK		OK	OK
PIXMA Ip3500		OK		OK	OK
PIXMA iP4000	USB1.1/IEEE1284	OK	OK	OK	OK
PIXMA Ip4200		OK		OK	OK
PIXMA Ip4300		OK		OK	OK
PIXMA Ip4500		OK		OK	OK
PIXMA Ip5000		OK		OK	OK
PIXMA Ip6000		OK		OK	OK
PIXMA Ip8500		OK		OK	OK
PIXMA MP110	USB	OK		OK	OK
PIXMA MP130		OK		OK	OK
PIXMA MP145		OK		OK	OK

	PIXMA MP150	USB 2.0 (GDI)	OK		OK	OK
	PIXMA MP180		OK		OK	OK
	PIXMA MP450		OK		OK	OK
	PIXMA MP730		OK		OK	OK
	PIXMA MP780		OK		OK	OK
	PIXMA MP830		OK		OK	OK
	S-200SPX		OK		OK	OK
	S-520	Parallel/USB		OK		
Printer Manufacture	Printer Model	Type of Printer	PS-150U	PS-160A	WPS-120U	WPS-130U
			PS-130U			
Lexmark	C720	Parallel		OK		
	E230	Parallel/USB2.0	OK		OK	OK
	E322	USB	OK	OK	OK	OK
	Optra S1250	Parallel		OK		
	P4350		OK		OK	OK
	P6250		OK		OK	OK
	T420		OK	OK	OK	OK
	T620		OK	OK	OK	OK
	W812	USB1.1/Parallel	OK	OK	OK	OK
	Z42		OK		OK	OK
	Z43	USB	OK	OK	OK	OK
	Z45	USB	OK		OK	OK
	Z55		OK	OK	OK	OK
	Z515		OK	OK	OK	OK
	Z615	USB1.1	OK		OK	OK
	Z705		OK	OK	OK	OK
	Able 3321			OK		
	DL700			OK		
	DL900			OK		

FUJI Xerox	DL-3400			OK		
	DL-3800			OK		
	DL-3850			OK		
	DL-5800			OK		
	DL-6400Pro			OK		
	DL-6800			OK		
	DocuPrint 2050	GDI(USB/Parallel)ok	OK	OK	OK	OK
	DocuPrint 240A		OK	OK	OK	OK
	Docuprint C1110B		OK		OK	OK
	FP 410			OK		
	Jet Wind 500C			OK		
	Phaser 3310		OK	OK	OK	OK
PP 10			OK			
Printer Manufacture	Printer Model	Type of Printer	PS-150U	PS-160A	WPS-120U	WPS-130U
			PS-130U			
Konica Minolta	Di 152	PCL-5		OK		
	Di 200/Di 250/Di 251	PCL-5		OK		
	magicolor 2450	USB (PCL-5)	OK	OK	OK	OK
	magicolor 5450	USB/Parallel (PCL-5)	OK	OK	OK	OK
	magicolor 7300		OK		OK	OK
	Magicolor 7300	IEEE1284/USB1.1	OK		OK	OK
	PagePro 9100	IEEE1284/USB1.1	OK		OK	OK
Samsung	CLP-500	(SPL)	OK	OK	OK	OK
	CLP-510		OK	OK	OK	OK
	CLX2160	USB	OK		OK	OK
	ML-1510/1710	(SPL)	OK	OK	OK	OK
	ML-1520		OK		OK	OK
	ML-1710		OK		OK	OK
	ML-1750	IEEE1284/USB(PCL6)	OK	OK	OK	OK

	ML-1915	USB	OK		OK	OK
	ML-2010	SPL(USB)	OK		OK	OK
	ML-2250		OK	OK	OK	OK
	ML-2550		OK	OK	OK	OK
	SCX-4016		OK	OK	OK	OK
	SCX-4100/4106/4116/4216F	IEEE-1284/USB(SPL)	OK	OK	OK	OK
	SRP 270			OK		
Panasonic	KX-P1121			OK		
	KX-P1123			OK		
	KX-P1124			OK		
	KX-P1624			OK		
	KX-P6500			OK		
TOSHIBA	E-161		OK (Parallel only)	OK	OK	OK
	Estudio-25			OK		
Printer Manufacture	Printer Model	Type of Printer	PS-150U	PS-160A	WPS-120U	WPS-130U
			PS-130U			
NEC	NEC P2200			OK		
	NEC P3200			OK		
	NEC P5300			OK		
	NEC P8000			OK		
IBM	IBM Inforprint 20	IEEE 1284 Parallel		OK		
	Inforprint 1116		OK	OK	OK	OK
	Inforprint 1312		OK	OK	OK	OK
	Inforprint 1316		OK	OK	OK	OK
	Inforprint 1332		OK	OK	OK	OK
	Inforprint 1412		OK	OK	OK	OK

Star	NX-2420			OK		
Sharp	AR-255			OK(Parallel only)		
	AR-265FG			OK(Parallel only)		
	AR-M160(AR-NB2)	IEEE 1284, USB 2.0		OK(Parallel only)		
	AR-M205	IEEE 1284, USB 2.0		OK(Parallel only)		
	AR-M207			OK(Parallel only)		
	AR-M209	IEEE 1284, USB 2.0				
	AR-M235			OK(Parallel only)		
	AR-M236	IEEE 1284, USB 2.0				
	AR-M275			OK(Parallel only)		
	AR-M276	IEEE 1284, USB2.0				
	AR-M350			OK(Parallel only)		
	AR-M400			OK(Parallel only)		
	AR-M450			OK(Parallel only)		
	RICOH	NF3570			OK	
	MFC 4800		OK	OK	OK	OK
	MFC 4800J		OK	OK	OK	OK
	MFC 6800		OK	OK	OK	OK
	MFC 7220	GDI(USB/Parallel)	OK	OK	OK	OK
	MFC 7420	GDI(USB/Parallel)	OK	OK	OK	OK

Brother	MFC 7820N		OK	OK	OK	OK
	MFC 8840D		OK	OK	OK	OK
	MFC 210C		OK		OK	OK
	MFC 240C		OK		OK	OK
	HL1260			OK		
	HL-2040	PCL6(USB,Parallel)				
	HL-2170W	USB	OK		OK	OK
	IntelliFax 2820		OK		OK	OK
Others	AURORA AD-166 MFP	USB(GDI)				
	AURORA AD-216 MFP	USB(GDI)				
	AURORA AD-226 MFP	USB(GDI)				
	DELL 1100	Parallel/USB(GDI)				
	ZONERICH AB-80K Thermal receipt printer					
	OKI 5530	Parallel				
	OKI Microline 391			OK		
	OKI B4350		OK	OK	OK	OK
	GSAN 5890 Thermal printer	Parallel				
	MITAC	MP-6600C		OK		
	BENQ CM3000		OK		OK	OK
Avision	MF 3200		OK		OK	OK
	MF 3230		OK		OK	OK
Citizen	GSX230		OK			
DATAMAX	I-4208			OK		
	I-4308			OK		
DOCUJET	1610F		OK	OK	OK	OK
	UA1610		OK	OK	OK	OK
FUTEK	F8000			OK		
	F84+			OK		

	F86+			OK		
Kyocera	FS-1010		OK	OK	OK	OK
	FS-1010KX		OK		OK	OK
	FS-1020		OK	OK	OK	OK
	FS-1920		OK	OK	OK	OK
	FS-2000D		OK	OK	OK	OK
	FS-820		OK	OK	OK	OK
	FS-920		OK	OK	OK	OK
	FS-6020		OK	OK	OK	OK
	FS-6026		OK	OK	OK	OK

Last Update:01.06.2010

